


Example 2: Transient Flow

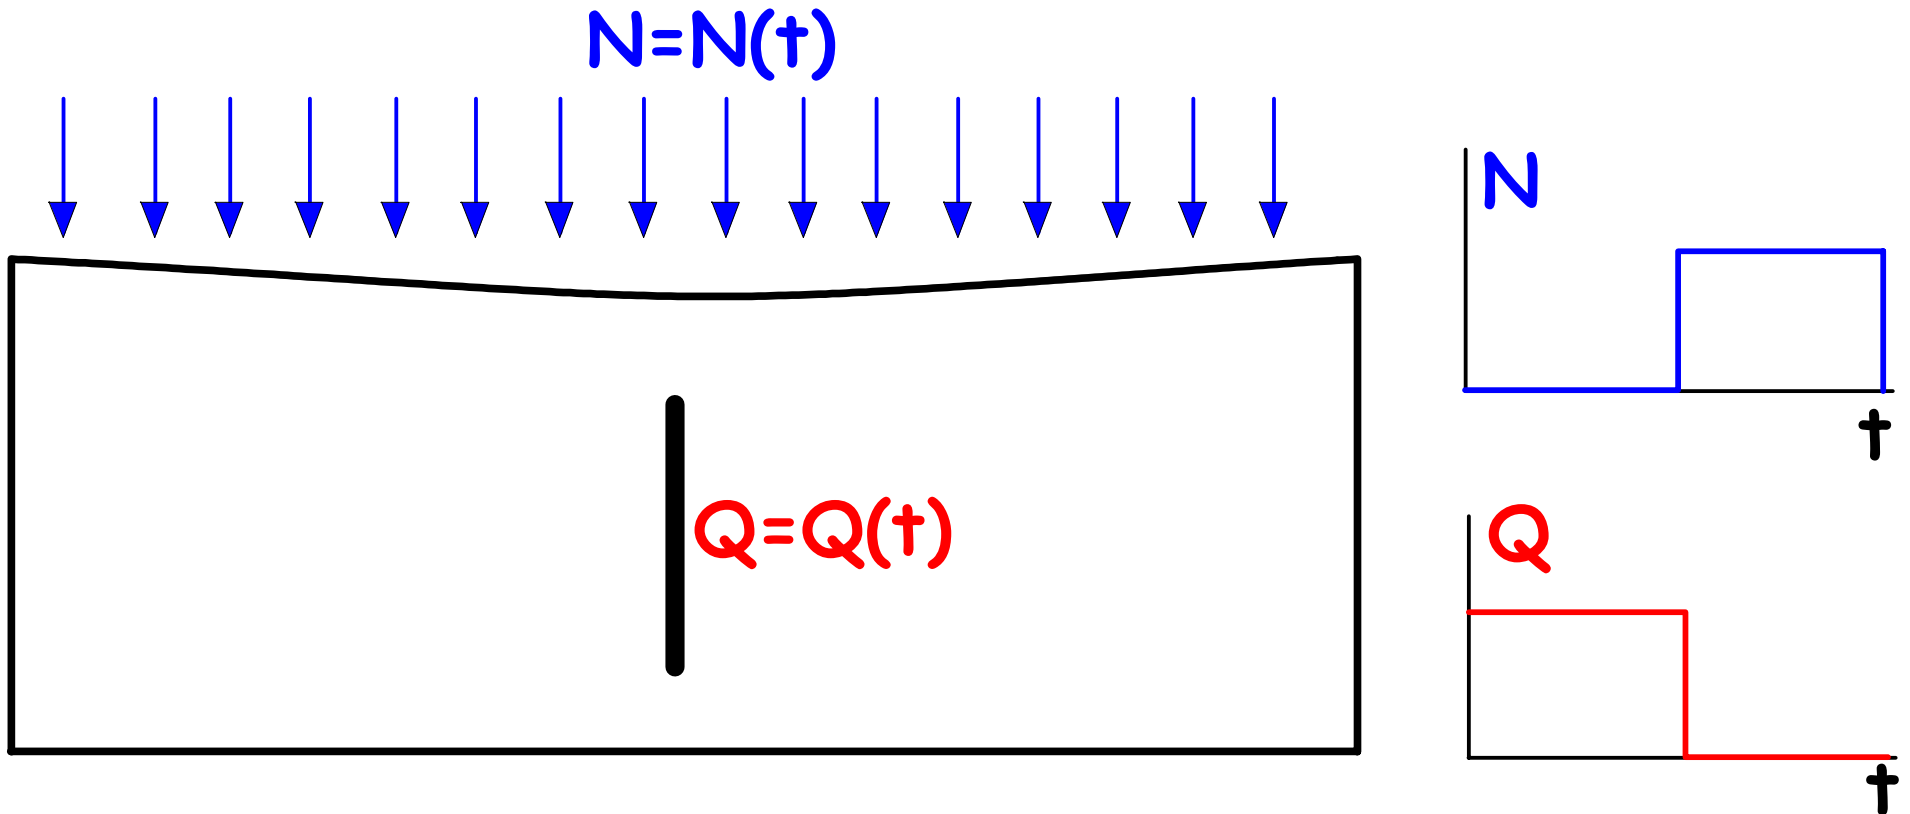

$t=0$: steady state with average recharge, N , and pumping, Q